How to Reset the Orphek Atlantik v4 LED light

What does resetting the light do?

It erases any stored memory from the previous gateway the light was connected to and returns the light to factory default settings.

To reset Orphek Atlantik follow these simple guidelines.

- 1. Plug the unit to one of the power receptacles of your home.
- 2. When the light is on, remove and apply the power to the light

four (4) times allowing about one second between on and off times.

Follow this example:

Remove the electrical plug on the Atlantik from your power receptacle and plug back in.

This will count as one time.

Repeat this same sequence three more times for a total of four (4) times.

On the fourth time you can leave the unit plugged in to the power source.

The light will now be reset and ready to connect to a new Gateway.

This is the **simplest way** to reset the light so it is not necessary to remove the top cover acrylic and press the reset button four times.

Other method.

Please remove the top acrylic cover of the LIGHT and press the reset button four times while the power is on the light.

You can check this video so see the operation.

https://youtu.be/CfhwJCYRCZY